




C & B OPERATIONS


HOW TO TURN ON JDLink

OPERATIONS CENTER WEB

1. Log into your John Deere Operations Center organization by going to operationscenter.deere.com (log in with your myjohndeere username and password). Then click **“Begin Process”** when the JDLink pop up message appears.

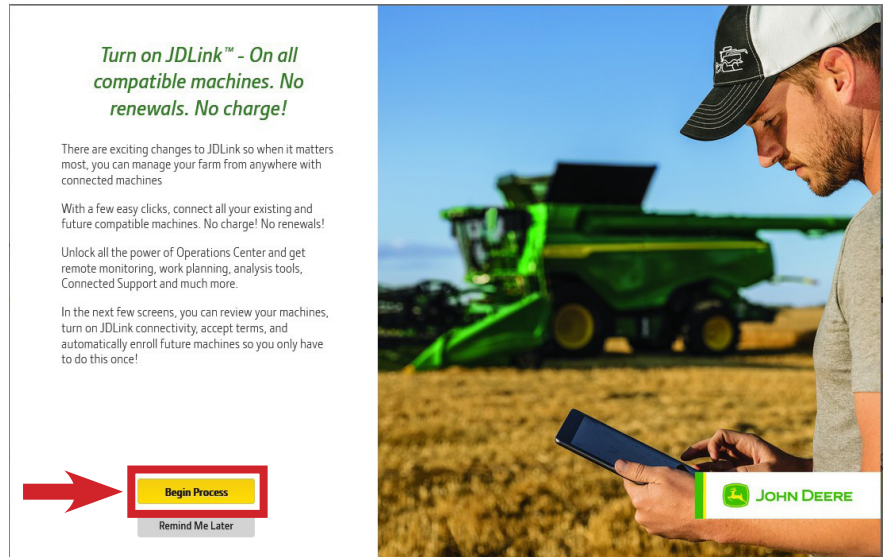

2. On the next page all of your JDLink enabled machines will be defaulted to on. We as your dealer ask you to leave your JDLink enabled machines toggled on so we are able to support you on all fronts. If you would like to toggle off any JDLink machines you can do so here as well. Once done click **“Next”**.

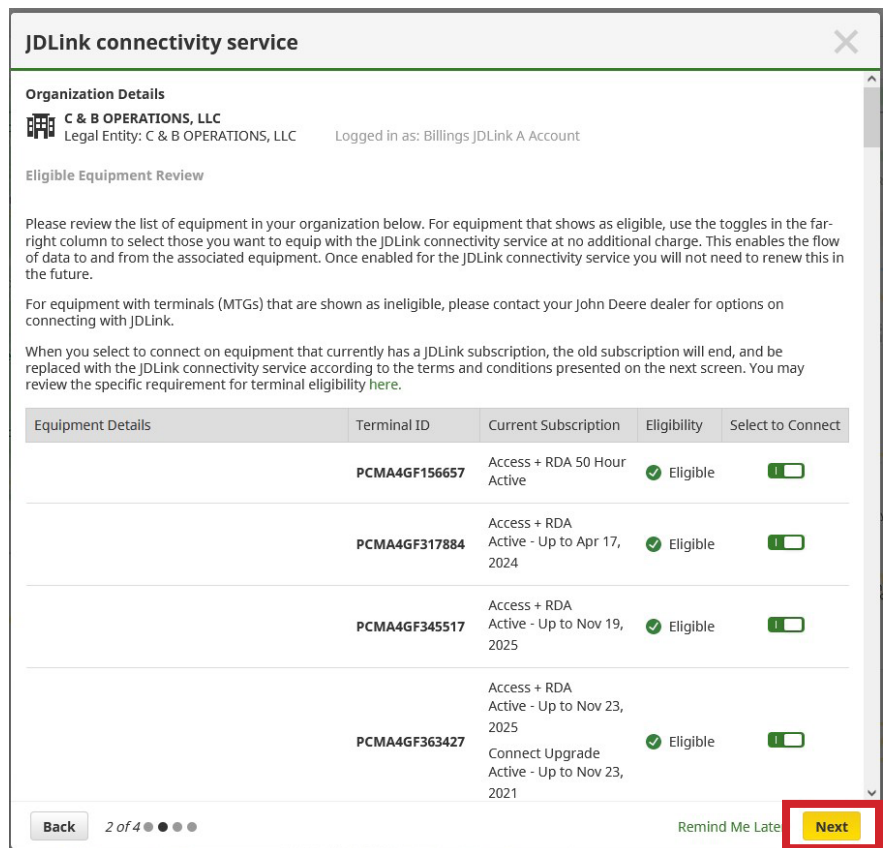



C & B OPERATIONS

HOW TO TURN ON JDLINK

OPERATIONS CENTER WEB

3. Next review your JDLINK machines as well as the Terms and Conditions. Then press **“Accept”** in the bottom right corner to complete the steps.

JDLINK connectivity service

Organization Details

C & B OPERATIONS, LLC
Legal Entity: C & B OPERATIONS, LLC Logged in as: Billings JDLINK A Account

By clicking accept, you will be agreeing to the JDLINK Telematics Service Agreement (shown below) for all terminals/equipment you have selected to enable with the JDLINK connectivity service.

Selected Terminals (106) [Show Terminals List](#)

Terms and Conditions

There was an error loading the document

[Back](#) 3 of 4 ● ● ● ● [Remind Me Later](#) **Accept**

4. In the last step the Auto Enrollment checkbox will be defaulted to on, this will allow any new terminals / equipment to be automatically activated when it is transferred to your John Deere Operations Center organization. We as your dealer ask you to leave the auto enrollment checkbox checked so we can support you on all fronts. Click **“Done”** to complete the steps.

JDLINK connectivity service

Service Enabled

Thank you for completing the JDLINK connectivity service enablement process! We are currently working on enabling the service on your selected terminal/equipment. It may take several minutes for the status to update and connectivity can take up to 1 day to enable if not already active.

To ensure we provide you with the best service possible, please review the following option:

☒ **Automatic Enrollment**

- Selecting this option allows new terminals / equipment added to your organization to be activated with the JDLINK connectivity service automatically according to the JDLINK Telematic Service Agreement. Transfer of data to and from your future devices will begin without any additional actions.
- If you choose not to select this option, you can enable eligible terminals/equipment for the JDLINK connectivity service as they are added to your organization.

4 of 4 ● ● ● ● **Done**

*There is a Remind Me Later link to select if you do not have time to complete the steps. If selected the same JDLINK pop message will appear the next time you log into the John Deere Operations Center.

JDLINK connectivity service

Remind Me Later

You will be reminded to review the new JDLINK connectivity service the next time you log in. Newly added equipment to your organization will not have the benefits of JDLINK connectivity until you turn on the service for your equipment.

If you wish to continue enabling the JDLINK connectivity service for your eligible equipment, please use the "Back" button.

☐ **Do not remind me again about this JDLINK connectivity service**

By selecting this option you will no longer be prompted to enable the JDLINK connectivity service. You can turn on the service in the terminal or equipment management functions whenever needed.

[Back](#) **Remind Me Later**